



SUOMEN
ERITYISJÄTE



SUOMEN
ERITYISJÄTE

Visiting the Forssa site

Site supervisor

Jussi Haavisto: +358 (0)40 670 9135

Technical manager

Ali Lintula: +358 (0)40 617 3732

Visiting the Pori site

Plant manager

Arto Erkkilä: +358 (0)40 619 4940

Operator

Ismo Viljanen: +358 (0)40 665 4874

Visiting the Kangasala site

Site supervisor

Jukka Tamminen: +358 (0)40 595 0838

Business manager

Osmo Jyräväkoski: +358 (0)40 096 4174

Weighbridge reports

Forssa: toimitukset@erityisjate.fi

Pori: toimitukset.pori@erityisjate.fi

Kangasala: toimitukset.kangasala@erityisjate.fi



More contact information

Drivers' guide



Documents that you need with you in the vehicle

- waste transfer note
- vehicle inspection certificate
- operating licence
- excerpt from the waste management register
- inspection report for a tailgate/crane
- tachograph inspection certificate
- speed limiter inspection certificate
- driver's personal documents: driving licence, certificate of professional competence (CPC card) or CPC endorsement on the driving licence

You must also have the following with you in the vehicle

- a fire extinguisher (min. 2kg) that is inspected and serviced annually
- a first aid kit
- warning triangle, toolbox
- absorbent material or mat, shovel and brush
- forms for reporting traffic and motor vehicle accidents
- the personal protective equipment required at our reception and treatment areas, i.e., high-visibility clothing, hard hat and safety footwear



You must always have a waste transfer note if you are bringing waste to us

- Primarily, the waste transfer note should be digital for the following wastes:
 - contaminated soil
 - construction and demolition waste
 - hazardous waste
 - wastes from grit chambers and oil/water separators

Other things to note:

- we only accept solid waste
- loads must be transported covered or in enclosed equipment → coverings are only removed after the weighbridge at separately designated locations in our reception and treatment areas
- waste asbestos must be packed in plastic or bound in encapsulant
- loads must not leak, splatter, fall, emit dust or eject material
- The locking mechanisms on interchangeable containers must be safe and function reliably
- If the driver needs to exit the vehicle while asbestos is being unloaded, they must use a respirator. The use of disposable overalls is also recommended.



**SUOMEN
ERITYISJÄTE**